

ICOTec

Game Calls & Decoys

GEN2 MODEL GC320 ELECTRONIC CALL/DECOY COMBO OPERATING INSTRUCTIONS



Always Test Your Batteries!

Prior to leaving the house on a hunt, be sure to test your batteries. Press and hold a call button on your remote. If the battery is good, the red LED will not blink or flicker. If it does, replace the remote battery. To test the call unit batteries, play 2 calls at the same time at high volume to see if the unit red power LED blinks. If so, change them prior to leaving the house.

You should be able to get approximately 40 hours of calling time on a set of good AA batteries. Extreme cold weather could make the battery life less than estimated.

1 YEAR LIMITED WARRANTY (Register within 15 days of purchase)

Your ICOTec product is warranted to be free of material defects and workmanship for 1 year after the date of purchase. In the event of a defect under this warranty, we will, at our option, repair or replace the product provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling or improper repairs performed by someone other than an authorized service contractor. Any return made under this warranty must be accompanied by the items listed below:

- 1) Contact Customer Service for instructions. You will need to complete a Warranty Claim form online prior to shipping product back to ICOTec. For service call (419) 450-3566 or email service@icotec.com.
- 2) Proof of purchase with date of purchase (store receipt)
- 3) Product should be well packed in a sturdy shipping carton with return postage prepaid to the address listed below:

Attn: Repairs

ICOTec

6415 Angola Rd.
Holland, OH 43528

This warranty gives you specific legal rights.

Specifications and product designs are subject to change without prior notice or obligation.

Thank you for your purchase!

Please fill out your product registration information and mail it back to us **within 15 days** of your purchase date. Or, you may go to our web site to register your product. Please retain your original receipt in the event that you would need to return the unit for a warranty repair.

Failure to mail in your product registration card or register your product on our web site within 15 days of purchase will result in the voiding of the warranty.

Name: _____

Phone Number: _____

Street Address: _____

City: _____

State: _____

Email Address: _____

Date of Purchase: _____

Retailer Name: _____

Serial Number: _____

Zip: _____

Serial # on label in battery compartment.

Setup & Operation Instructions

ICOTec GEN2 Model GC320 Call/Decoy Combo

1

Add Batteries

CALLER - Remove the decoy from the call unit. Place 4 new AA batteries as indicated, replace decoy and tighten thumb screw.

DECOY - Remove the battery cover by sliding ribbed plate downward. Place 4 new AA batteries as indicated.

REMOTE - Open the battery panel on the back of the remote. Place a 23A battery and replace the cover.

*Use lithium batteries for best results in cold weather.
All AA batteries must be 1.5V only.*



2

Turn Power Switch On

Slide the power switch to the ON position. The red LED indicator will light up if unit is on and the batteries are good. If the red LED does not light up, check that your batteries are new and in the proper positions.

3

Raise Antenna

Place antenna in upright position on main unit.

4

Select Call(s)/Pause Call(s)

When you select a call it will play 30-40 seconds and then go silent 20 seconds. This cycle of play and silent will continue indefinitely until you select PAUSE or STOP. We designed our calls to cycle for a more natural sound. You may press PAUSE to immediately stop the sound. Press PAUSE again to restart the sound where it was paused. To end calls press STOP.

5

Adjust Volume

Press volume up arrow for louder or volume down arrow for quieter.



Pairing Remote to Unit

If you purchase a replacement remote or your remote becomes unresponsive and you have found that the battery is in good working order, you can pair it up to the call unit.

Using a small paper clip, simply press and hold the reset button located inside the tiny hole to the left of the "ON/OFF" switch. While the call unit LED light is blinking, press and hold any call button on the remote until the unit begins playing that sound.

Trouble Shooting

Unit does not play calls - Be sure batteries are NEW and are installed properly. If you press a call button on the remote and the red LED light blinks, you need to replace the 23A battery. If the unit begins behaving strangely and not playing proper sounds, or you have trouble starting and stopping sounds, check the battery indicator light on the unit. If it is blinking you need new batteries.

Lost Your Remote?

For replacement remotes: <https://icotec.com/icotec-replacement-remote-controls/>
Or you can go to www.icotec.com and do a search for replacement remotes.

Send Us Your Pics!

If you would like the opportunity to show up on the ICOTec.com website or one of our social media sites, please feel free to send us your hunting stories and photos. We have hundreds of customers each year that share their fascinating stories with us - you can be one of them!

Include your name, photo and hunt details in an email to info@ICOTec.com, and we may share your story.

Check out more of our products at your favorite retailer or online at ICOTec.com.

To find a dealer near you, log on to ICOTec.com and select the Dealer List.

The content on ICOTec.com is constantly growing, so please take a moment to search the site for photos, manuals, videos and professional advice.

Thanks again for your business!

Call List - GEN2 Model GC320		
Coyote Female	Cottontail Distress	Rat Distress
Coyote Male	Jack Rabbit Distress	Woodpecker Distress
Coyote Pup Distress	Red Squirrel Distress	Black Bird Distress
Coyote Yip/Howl	Fawn Distress	Feral Cat Distress
JD Platt Howl	Mouse Voles	Robin Distress
Timber Wolf Pups	Baby Cottontail	Crow Baby Distress
Gray Fox Distress	Orphan Goat	Raccoon Baby Distress
Red Fox Distress	Chicken Distress	Raccoon Fight

Call List - GEN2 Model GC320

Or, Log on to:
www.icotec.com,
Warranty Registration is under **INFORMATION** tab.

Mail to:
ICOTec
ATTN: Warranty Department
6415 Angola Road
Holland, OH 43528

GEN2 MODEL GC320
ELECTRONIC CALL/DECOY COMBO
WARRANTY REGISTRATION CARD

ICOTec